

CAUTION

Beacause of stability reasons, it is recommended to let the wallpaper acclimitise for 24 hours before applying it to the wall. This prevents shrinkage of the wallpaper.

The optimal temperature of applying the wallpaper is between 18 - 25 °C and a humidity of 40% - 65%.



USER MANUAL

APPLYING WALLPAPER

Step 1

Preparing

If possible, switch off the electrical groups of wall sockets and switches, remove the frames and tape them with wallpaper tape. Then remove the old wallpaper, if necessary. Make sure the wall is smooth by removing nails and unevenness and filling holes with all filler. Let the filler dry well and sand it smooth. Cover the ground with, for example, newspapers, cloths or tarpaulin. Set up a sturdy staircase to press the wallpaper well over the entire wall.

Caution! If your walls are plastered, use a primer so that the wallpaper glue is not directly sucked into the wall and therefore the wallpaper does not stick. Distribute the primer well and let it dry overnight.



Rolling out

Roll out the wallpaper and check if everything is correctly delivered. At the bottom of the wallpaper or on the back are numbers.




Step 2

Step 3

Loodlijn

To get the wallpaper perpendicular you first have to draw a perpendicular line to the wall with a pencil. Make sure you place a thin, soft line, otherwise the line can shine through the wallpaper. Use a long spirit level to place the line. The position of the line can be determined by measuring the width of the wallpaper strip and drawing this on the wall with a tape measure. If you have ticked that you have 5 cm margin around the edges when ordering, then you subtract 5 cm from the width of the strip here.

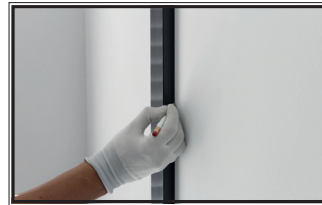

Wallpaper glue

Wallpaper glue has to be made according to the user manual on the glue packaging. In the case of non-woven wallpaper, apply wallpaper adhesive to the wall for each strip of wallpaper. Use a glue brush or a wallpaper glue roller to apply the wallpaper glue. Apply slightly wider than the width of the wallpaper.


Step 4

Step 5

Wallpapering and cutting

Work from top to bottom. Keep a 5 cm margin at the top when ordering wallpaper with a 5 cm margin. Place the strip straight along the perpendicular line. Straightening is very important because the following strips connect to it. Push the wallpaper firmly against the wall with a wallpaper pusher. In the corners you have to press the wallpaper extra so that you get a folded line. If you pull back the wallpaper a little, you can simply cut away the wallpaper along the folding line with a pair of scissors. You can also cut away wallpaper. Then press the wallpaper pusher firmly into the corner and cut away the remaining wallpaper with a sharp knife. Simply cut out the wall sockets by pressing the wallpaper firmly on the wall sockets and cutting away the middle piece.

Repeat this step until all wallpaper lanes have been installed.

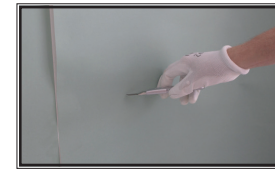

Finish

Take a wallpaper pressure roller and press the air bubbles away from under the wallpaper. Roll to the side so that air can escape. Use a seam roller for an even more beautiful and tighter result. Cut and cut away excess wallpaper. Check all edges and seams to make sure they stick well. Mount the conversion of the sockets and switches and put the power back on.

Tips

- Do you have to wallpaper around a window or any other obstacle? Stick the strips on top of it and then cut it off piece by piece along the frame. So don't cut the whole track to size at once.
- A large bubble needs to be punctured with a pin and then you can wipe the air away. Small air bubbles disappear as they dry up.
- To speed up the drying of wallpaper, turn up the heating or open the windows.
- Remove excess glue with a dry or damp cloth.
- Use a seam roller for an even more beautiful and tighter result.
- Make sure you have sharp folds at the corners so that cutting away excess wallpaper is easy and straight.

Step 6